

User Menu for Hoymiles APP Monitoring Platform Rev 3.0

## No 1 Content introduction

Step 1. App login interface.



Step 2. Input the account and password and click log in.





#### Step 3. Power station homepage.



#### Step 4. Click "Total", you will see station list.

	Station lis	t Q 🕀
Completed(3)		Building(0)
Current power; OW Rua Padre Germano,	<b>≷en_0.5kW</b> oday: 0Wh rgy: 0Wh Capa 71 — Parreão, 1	2018-08-09 04:46:06
Current power: 1.60k 40 Kang Qiao Lu, Gor	RDTest2_3kW oday: 8.78kWh rgy: 483.05kWh xW Capa ngshu Qu, Hangz	2018-08-09 13:56:15 1 II III acity: 3kW 53.49% thou Shi, Zhejiang Sh…
Current power; 2.10k 301 Huan Cheng Bei L	VO_3KW oday: 10.36kWh rgy: 3.18MWh kW Capa u, Xihu Qu, Har	2018-08-09 13:46:16 2018-08-09 13:46:16 2018-09 13:46:16 2018-09 13:46:16 2018-09 13:46:16 2018-08-09 13:46 2018-08-09 13:46 2018-08-08-09 13:46 2018-08-08-09 2018-08-08-09 2018-08-08-08-08-08 2018-08-08-08-08-08 2018-08-08-08-08-08 2018-08-08-08-08-08-08-08-08-08-08-08-08-08



#### Step 5. Click"HMRDTest2-3kw", you will see the power station

#### information.



Statistics Information Engery unit: kWh 2017.11 2017.10 2017.12 2018.7 2018.2 2018.1 2017.9 2018.5 2018.4 2018.3 2018.8 2018.6 N ω 4 UT 0 7 8 9 10 1 12 13 14 15 16 17 18 19 20 21 22





Step 6	D. CIICK	you c	an e	aiti	noa	uie	layo	ut.
<	Physical map	Edit	<	М	l entry	and layo	ut	Save
2018-08-0	08 🔺 Power 🔻 🕨 18:-	15	New array	1				
0.70% 3-3 3.80% 1-3	0,000 1.000 0.700 0.000 0.000 0-1 0-2 0-3 0-4 0-5 0,000 0.400 0.400 0.000 0.000 1-1 1-2 1-3 1-4 1-5		106041 600007 -1 0-0 106041 600023 -3	106041 60007 -2 0-1 106041 60023 -4	106041 600023 -1 0-2 106041 600007 -3	106041 600023 -2 0-3 106041 600007 -4	106041 600002 -1 0-4 106041 600002 -4	106041 600002 -2 0-5 106041 600002 -3
			1-0		2-2	2-3	2-4	2-5
			3-0	3-1	3–2	3–3	3—4	3–5
		•	4-0	4-1	4–2	4-3	4-4	4–5
3k 2.50k 2k	© 	5_8.00W	5-0	5-1	5-2	5–3	5-4	5-5
1k 500 0 00;00 06	5:15 08:45 11:15 13:45 16:	15 18:45	6–0 ⊖ Co	<sub>6-1</sub> ntinue bi	6-2 nding	6-3	6–4 i Edit arr	6-5 ray

# Step 6. Click 🛄 , you can edit module layout.





					<	١	M entry	∕ and	layout		$\boxdot$
1060416 00023-								Ŷ			
4					<	١	M entr	y and	layout	5	Save
-1 0-0	-2 0-1	000023 -1 0-2	-2 -2 0-3	-1 0-4	New						
106041 600007 -3	106041 600007 4	106041 600023 -3		106041 600002 4	106041 600007 -1 0-0	106041 600007 -2 0-1	106041 900023 -1 0-2	106041 600023 -2 0~3	106041 600002 -1 0-4	106041 6000002 -2 0-5	0-6
1-0	1-1	1-2	1-3	14	106041 600007 4	106041 600023 -4	106041 600023 →3	106041 600007 -3	106041 600002 4	106041 600002 -3	
					1-0	1-1	1-2	1-3	1-4	1-5	1-6

# Step 7. Click , you can operate device(replace,delete...)

<		Devi	ce-H	MRDT	ēs…		Q
	DTU(1)	Repeat	:er(0)	Ν	∕/I(3)	comm	1_relatior ship
~	DTU-ID:	10F232900	032				
	Repeater	s: 0			MI	counts:	3/3
	٦	Restart			$\mathcal{O}^{F}$	Replace	]
	K	Dev	ice-HN	MRDTE	25		Q
	DTU(1)	Repea	iter(0)	MI	(3) C	omm_rel ship	ation
	MI-IE	0 106041600	007 N	Module	counts4	⑪	~
	MI-IE	0 106041600	023 N	Module	counts4	⑪	$\sim$
	MI-IE	0 106041600	002 M	Module	counts4	⑪	^
	10604	1600002-1			1,	/(0,4)	>
	10604	1600002-2	$\checkmark$		1,	/(0,5)	>
	10604	1600002-3	$\checkmark$		1,	/(1,5)	>
	10604	1600002-4	$\sim$		1,	/(1,4)	>
	(D) Resta	rt 🕑 Sta	art up	() Shu	t down		ice



# No 2 Upload the picture of power station

# Step 1. Click the 🕓 button.



#### Step 2. Click the 1 and 2 buttons in turn.





# No 3 Change the languages

# Step 1. Click the 1 and 2 buttons in turn.

	М	e					
<b>(</b> Personal information							
Change the password 2							
i About us							
📩 Clear the	cache						
	Logir	n out					
			1_				
Home	Station	Alarm	Me				

#### Step 2. Set the language you want.





# No 4 Change the password

# Step 1. Click the 1 and 2 buttons in turn.

	Me	Э	
Personal	information 2		
<table-cell> Change t</table-cell>	ne password		
🛟 Language	e settings		
i About us	;		
📩 Clear the	e cache		
	Login	out	
	(TTD)		
Home	Station	Alarm	Me

# Step 2. Set new password.

< Change the pass
Old password Input old password
New password Input new password
Confirm password Confirm new password
6~20 letters,numbers or symbols
Ok



## No 5 upgrade APP version

Step 1. Click the 1 and 2 buttons in turn.



#### Step 2. Click "Check update" and update it.

